

## Disassembly Instructions For

### Storage Casegoods Furniture

1. Remove doors by unlocking hinges.
2. Remove drawers by unlocking inner part from slides.
3. Remove other visible accessories (grommet, pencil tray, etc.).
4. Disassemble all wood components by unlocking camlock fitting.
5. Unscrew all visible fasteners from wood components.
6. Sort each component according to material.
7. Check with your local recycling center to find out if the materials are recyclable (varies depending on region/country).

#### Tools

